



1. Turn MD-01 driver off.
2. Set switch to position OFF (back panel of driver).
3. Connect cable to the COM 0.
4. Turn on the driver MD-01.
5. Please install Flash Magic. Newest version available here:
<http://www.flashmagictool.com/download.html&d=FlashMagic.exe>
6. Check flash configuration just like on attached screenshots:
 - Select COM port and firmware file. Rest of parameters like on screenshot:

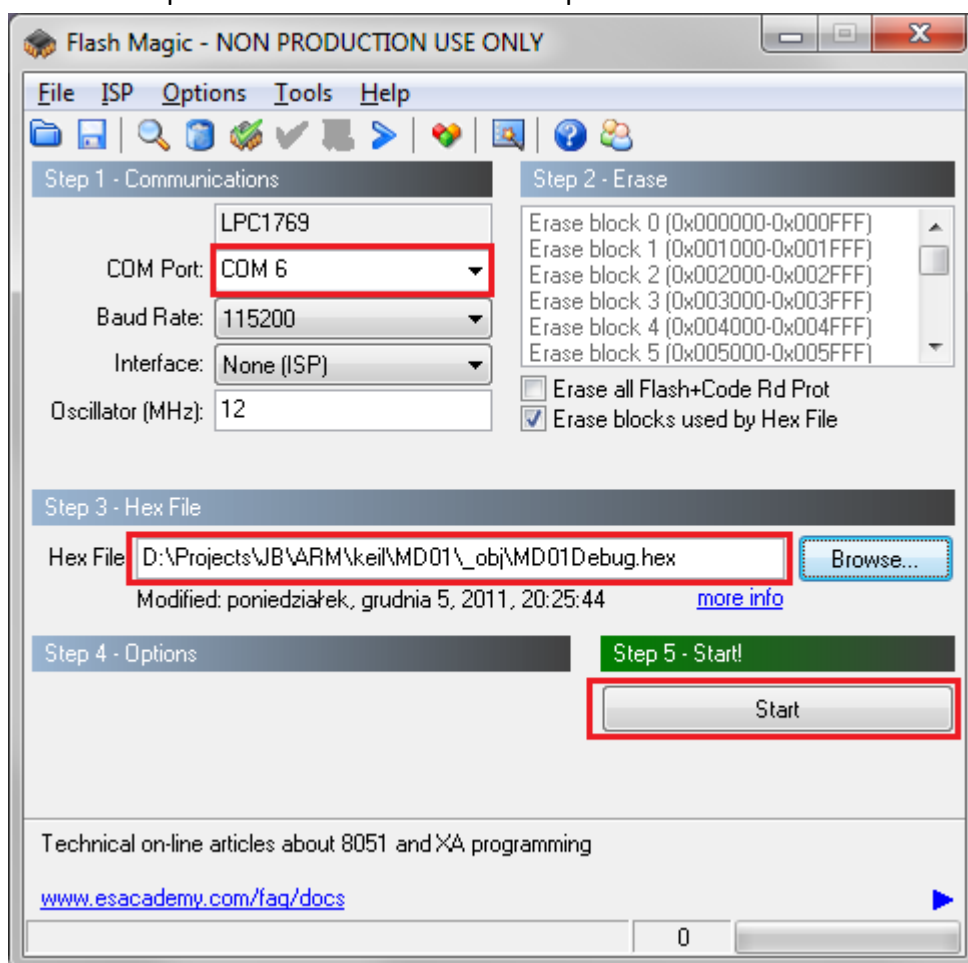

- Choose from menu **options->advanced** option, page **Hardware Config** and set options like screenshot:

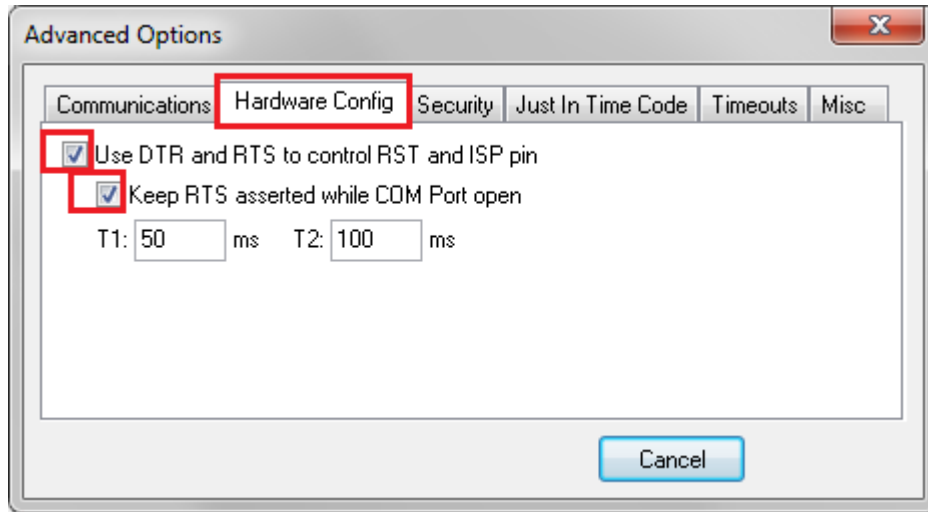

7. Click Start button on first screenshot to update firmware.
8. Turn off the driver MD-01 after update finished.
9. Set switch to position PR (back panel of driver).
10. Turn MD-01 driver on.